

# Horizontal Expansion App

GDS 2000A Series

---

## USER MANUAL

GW INSTEK PART NO.



ISO-9001 CERTIFIED MANUFACTURER

**GW INSTEK**

This manual contains proprietary information, which is protected by copyright. All rights are reserved. No part of this manual may be photocopied, reproduced or translated to another language without prior written consent of Good Will Corporation.

The information in this manual was correct at the time of printing. However, Good Will continues to improve its products and therefore reserves the right to change the specifications, equipment, and maintenance procedures at any time without notice.

**Good Will Instrument Co., Ltd.**  
**No. 7-1, Jhongsing Rd., Tucheng Dist., New Taipei City 236, Taiwan.**

# Table of Contents

<b>I</b> NSTALL THE SOFTWARE .....	4
<b>U</b> NINSTALL THE SOFTWARE.....	6
<b>H</b> OW TO USE THE SOFTWARE .....	7

# INSTALL THE SOFTWARE

- Steps
1. Please make sure that the firmware version is V1.15 or above.
  2. Copy the installation file, HExpand.gz, onto a USB flash drive.
  3. Please insert the USB flash drive into one of the USB A ports.
  4. Enter the file utilities menu (Utility key → File Utilities).
  5. Use the Variable knob and the select key to navigate to the HExpand.gz file on the USB flash drive. See Fig. 1.
  6. Press the Select key to select the file. A message will appear asking you to make sure the system date is correct before you proceed. Press the Select key to confirm and to start the installation process. See Fig. 2.
  7. The installation will proceed automatically. When the following message appears, "Please turn-off the oscilloscope and turn-on again!", cycle the power on the scope and remove the USB flash drive.
  8. The Horizontal Expansion APP should now be installed.

Fig.1



Fig.2



# U NINSTALL THE SOFTWARE

- Steps
1. Enter the APP menu. (Test key → APP)
  2. Use the Variable knob to select the HExpand driver file. Fig.3.
  3. Press the Uninstall soft-key twice to uninstall. The uninstallation process will commence automatically.
  4. Cycle the power on the oscilloscope when the message, "Please turn-off the oscilloscope and turn-on again!" appears on the screen.

Fig. 3



# HOW TO USE THE SOFTWARE

- Steps
1. Enter the Mode menu. (Acquire key → Mode).
  2. Press the Expand key and choose By Center or By Trigger Pos. Fig. 4.


Fig. 4



Example:  
By Center

- The Expand by Center option will scale the waveform from the center of the display when the waveform is scaled using the TIME/DIV knob. See Fig. 5.

Fig. 5

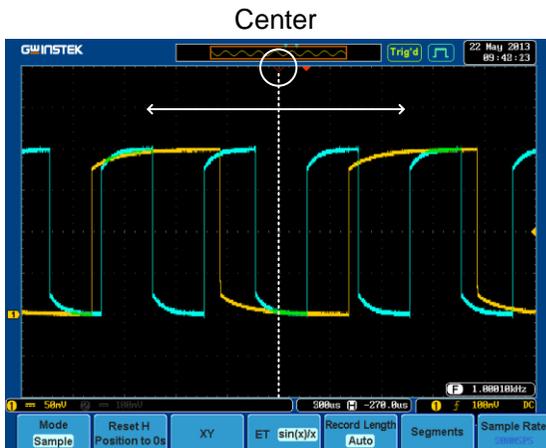

Example:  
By Trigger Pos

- The Expand by Trigger Pos will scale the waveform from the trigger position when the waveform is scaled using the TIME/DIV knob. See Fig. 6.

Fig. 6

